

Bang & Olufsen

M A S T E R P A N E L A V 9 0 0 0

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

- 4 Beosystem AV 9000
- 5 Placement
- 6 Connections
- 7 Assembling
- 8 Ready for use...
- 9 Maintenance
- 10 International Guarantee

This setting-up guide explains how to assemble the Master Panel AV 9000 and make it ready for use. We recommend that you follow the instructions carefully.


For instructions on setting up the other components in your Beosystem AV 9000, please refer to the setting-up guides enclosed with these products.

See the Master Panel AV 9000 user's guide for detailed operating instructions.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

The following parts are required to set up the Master Panel AV 9000 and to connect it to your Beocenter AV 9000:



- one set of glass doors (left and right)
- one cable cover, to conceal and hold the cables on the rear of the Master Panel AV 9000
- one Master Link cable for connection to the Beocenter AV 9000
- one lead for connection to the mains

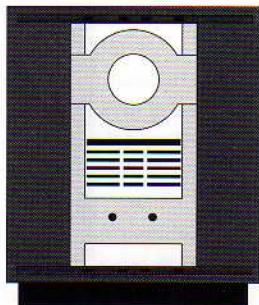


Before you start...

When setting up the Master Panel AV 9000 we suggest you use the following sequence:

 - 1 Place the Master Panel AV 9000 where you want to use it.
- 2 Connect all cables to their sockets on the rear panel of the Master Panel AV 9000 (only remember not to connect it to the mains yet!).
- 3 Arrange the cables in the grooves of the cable cover and attach the cover to the rear of the Master Panel AV 9000.
- 4 Loosen the transport protection screw for the CD drive mechanism.
- 5 Attach the glass doors.
- 6 Set up the other parts of your Beosystem AV 9000.
- 7 Connect all the products to the mains.

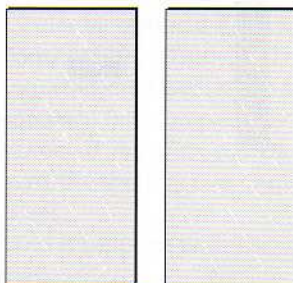

Complete the setting-up procedure as described in the *Setting-up guide* for the Beocenter AV 9000 (calibration of speakers etc.)

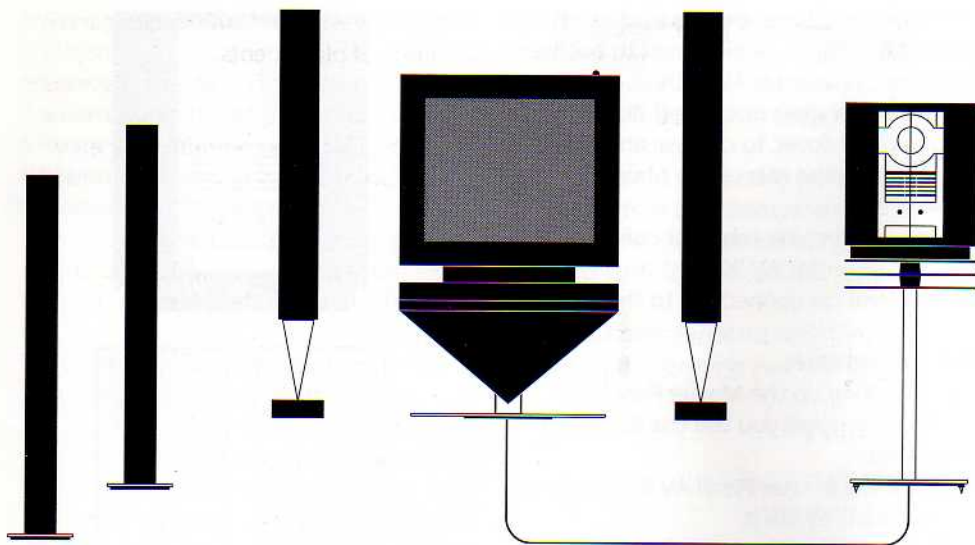

A Beosystem AV 9000 setup can be composed in different ways to your personal taste and home environment.


This setup is based on the Beocenter AV 9000 and the Master Panel AV 9000. It has a pair of Beolab 8000 as front speakers and a pair of Beolab 6000 as rear speakers.

Daily operations are carried out from the Master Panel AV 9000 by direct operation and through on-screen menus.

The Beolink 5000 remote control gives access to secondary functions not otherwise available and we therefore recommend it as an indispensable part of the system.

The setup is shown with both front and rear speakers connected. However, if you wish so, you can set up the system with only a set of front speakers connected.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

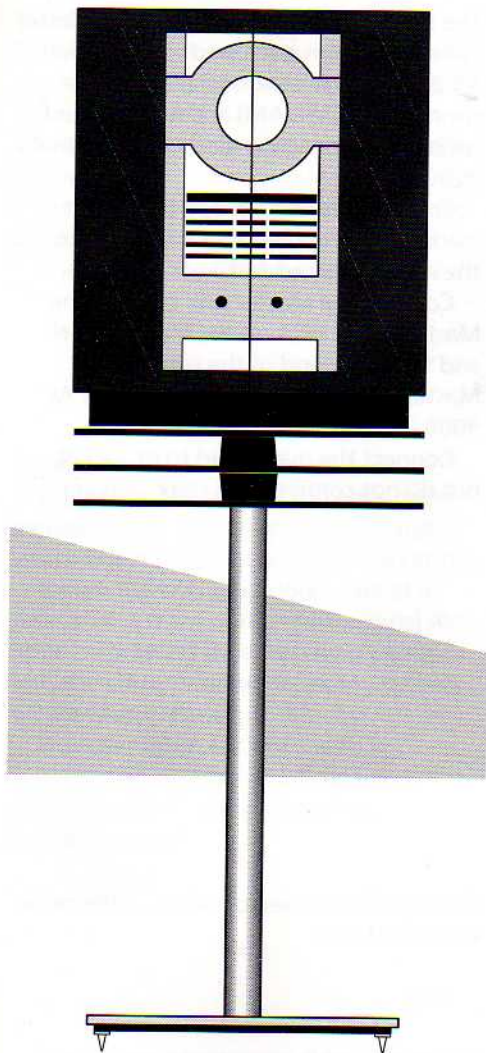

Master Panel AV 9000 placed on its stand with one extra shelf.

The Master Panel AV 9000 is designed for a variety of placements.


Its compactness facilitates a placement next to your favourite listening/viewing position, which is also optimal for easy operation of the complete Beosystem AV 9000.

Make sure, when deciding where to place the Master Panel AV 9000, that you can see - and read - the on-screen menus on the Beocenter AV 9000.

The Stand is an optional extra for the Master Panel AV 9000. This stand has a small integrated shelf with room to accommodate a few compact discs and cassette tapes. If you wish, you can supplement the shelf by one or more extra shelves.

The stand is supplied with two different sets of feet:

- *spikes* for use on carpeted floors
- *rubber* feet for use on non-carpeted floors

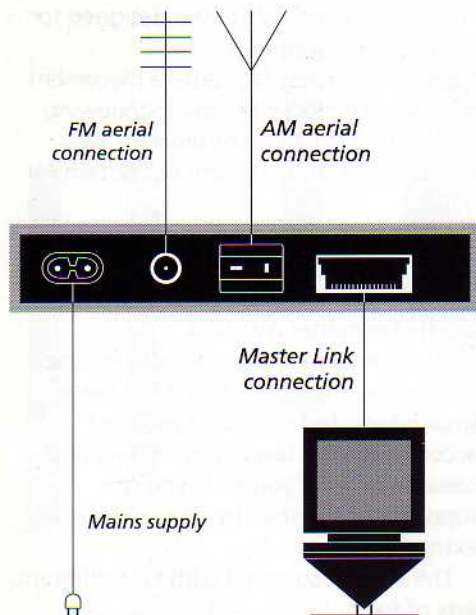


The socket panel on the rear of the Master Panel AV 9000 is equipped with a socket for mains supply, two sockets for aerial connection (FM & AM) and a Master Link socket for connection to the Beocenter AV 9000.

Connect the FM aerial to the socket marked FM and the AM aerial, if any, to the socket marked AM.

Connect the Master Link cable to the Master Link socket on the Master Panel and the other end of the cable to the Master Link socket on the Beocenter AV 9000.

Connect the mains lead to its socket, but do not connect it to the mains yet.

This manual was scanned by
and available FREE at www.Iconic-AV.co.uk

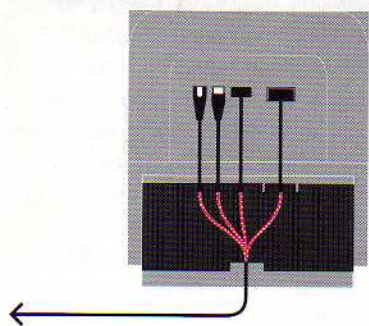


Arrange the connector cables in the cable cover as shown

and

fasten the cable cover to the rear panel grill of the Master Panel AV 9000:

- Insert the bottom row of pegs into the grill.
- Push the top row of pegs into the grill.
- Pull the cable cover upwards until the pegs mesh properly with the grill.

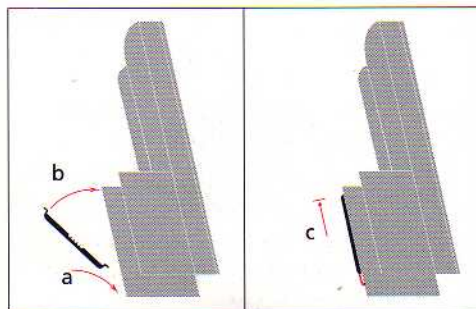

Transport protection


The transport protection screw for the CD drive mechanism is located under the CD clamp.

Lift the clamp manually to gain access to the screw.

Loosen the screw by turning it counter-clockwise until it feels springy.

Then lower the CD clamp again.

CD transport protection screw

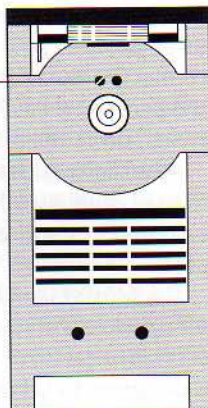


Glass doors

The labels on the back of the glass doors indicate which end must point up, and which side must point towards the centre.

Fasten the two glass doors, one at a time, to the front of the Master Panel AV 9000 by pressing their fastening points into the corresponding fastening sockets on the Master Panel.

Press gently on each of the four fastening points until you hear a click. The click indicates that the glass doors are properly seated.

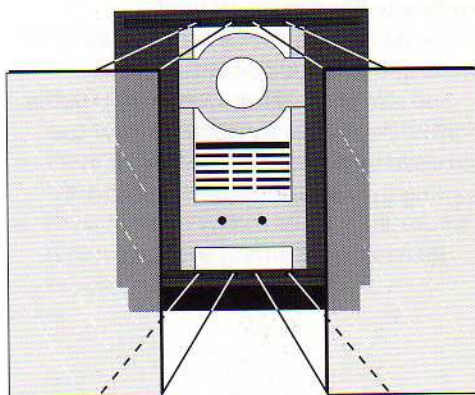

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

Note: Treat the glass doors with care! If they crack or chip or if they are damaged in any other way, they should be replaced immediately as they could otherwise cause bodily harm. You can order replacement doors through your Bang & Olufsen dealer.

When you have finished setting up the other parts of your Beosystem and have connected the Master Panel AV 9000 to the Beocenter AV 9000 as described, switch on at the mains.

A red light appears in the display of the Master Panel AV 9000 indicating that the system is in stand-by mode, ready to be used.

The Master Panel AV 9000 is a complete AV operation unit with integrated audio sources. It cannot be used on its own, but is designed to be used connected to the Beocenter AV 9000, thus creating a complete Beosystem AV 9000.

Please refer to the *User's guide* on making the various presettings etc.

See also the separate *Setting-up guide* for the Beocenter AV 9000 on how to proceed with the remaining steps in setting up your Beosystem AV 9000.

This manual was scanned by
and available FREE at www.lconic-AV.co.uk

Note!

If you move the Master Panel AV 9000 to another place, you must switch it off at the mains before unplugging the mains lead.

Master Panel AV 9000

Before you clean the Master Panel AV 9000, we recommend that you disconnect it from the mains so the glass doors do not open and close automatically. While the Master Panel is disconnected, you may open or close the glass doors manually, if you like. It requires only a little gentle force to do so.

Use a soft, dry cloth to wipe dust off the Master Pnel AV 9000.

The glass doors can be removed and cleaned on their inner side, if required. To remove the glass doors, simply grip them tightly (one at a time - while they are open) and gently but firmly unhook them from their four fastening points, pulling outwards.

To clean the glass doors, we recommend that you use a mild window cleaner.

Fasten the doors again as described earlier in this guide. Leave the doors half-way open before reconnecting the Master Panel AV 9000 to the mains.


Tape path

The tape path - that is, the tape heads, pinch rollers and other parts which the tape touches during playback or recording - should be cleaned every now and then to avoid dust and fluff build-up. It is a good idea always to clean the tape path prior to making a recording.

Use a tape head maintenance kit or simply a cotton wool stick dipped in a rinsing fluid intended for this purpose. The cleaning process must be carried out while there is no cassette in the tape compartment.

Here is how to do it:

- Press A.TAPE. The tape head and the right-hand pinch roller are now exposed, enabling you to clean them.
- Press TURN. The left-hand pinch roller is now exposed.
- Press STOP or switch to another source when you have finished the cleaning process.

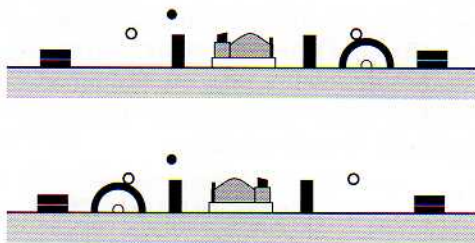

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

Do not use alcohol or other solvents to clean any part of the Master Panel AV 9000!

This Bang & Olufsen product carries a guarantee against defects in workmanship and materials. The terms of the guarantee apply to the country of purchase but will be met by authorized Bang & Olufsen dealers in other countries. The guarantee period applying to the country of purchase takes priority over guarantee periods applying in other countries, even where differences exist.

In order to obtain service under this guarantee, a certificate stating the following information is required:

- Name of product and type number
- Serial number
- Date of purchase
- Guarantee period
- Dealers or suppliers signature

If you intend to use the product in a country other than that in which it was bought, it may be necessary for you to have the product modified to suit the transmission system, or mains supply etc., used in the country you are moving to. We therefore recommend that you contact your Bang & Olufsen dealer before moving to another country. No costs incurred in this connection will be covered under the terms of the guarantee.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

Environmental information

This Bang & Olufsen product was delivered in a packing made to protect and transport the product safely from the factory to your home.

In the design of our packing we use the most conserving and recyclable materials known today, and we constantly work to reduce any negative side effects our packing materials may have on the environment.

We observe any progress with great interest.

Corrugated cardboard Made of at least 45 % recycled material. The printing ink contains no heavy metals, and the box is reusable for paper production.

Foamed plastic parts Made without use of injurious inert gasses. Can be recycled or incinerated, liberating carbon dioxide and water. Usable for soil improvement in granular form.

Plastic bags All plastic parts are free of PVC and can be recycled or incinerated, liberating carbon dioxide and water.

Batteries We urge you to show consideration when changing the batteries in your remote control terminal. Used-up batteries should be disposed of and kept separately.

The use of any controls, adjustments or procedures other than those specified herein may result in hazardous radiation exposure.

**CLASS 1
LASER PRODUCT**

The black and yellow label on the compact disc player serves as a warning that the apparatus contains a laser system and is classified as a class 1 laser product. In case of any trouble with the compact disc player, please contact your Bang & Olufsen dealer. The apparatus must be opened by a qualified serviceman only.

This product fulfils the conditions stated in the EEC directive 82/336 concerning radio frequency interference.

Special note for the UK market

The wires in the mains lead supplied with this apparatus are coloured in accordance with the following code:

Blue: Neutral
Brown: Live

As the colours of the wires in the mains leads may not correspond with the coloured markings identifying the terminals in your unit, proceed as follows:

- The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured BLACK.
- The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured RED.

Ensure that your equipment is connected correctly. If you are in any doubt, consult a qualified electrician.

**This manual was scanned by
and available FREE at www.lconic-AV.co.uk**

**This manual was scanned by
and available FREE at www.Iconic-AV.co.uk**